

To assign an internal function to one key you must modify the `_tnx_process.jcf` file.

Let's take an example to make the process more understandable:

The objective is assigning the TAB function to the P1 key in Zebra MC33 device.

