

KEY_CUR_LEFT	1045
KEY_CUR_UP	1046
KEY_CUR_RIGHT	1047
KEY_CUR_DOWN	1048
5250_BKSP	1050
5250_DUP	1051
5250_FIELDPLUS	1052
5250_FIELDMINUS	1053
5250_FIELDEXIT	1054
5250_DELETE	1055
5250_ERASEINPUT	1056
5250_ERRORRESET	1057
5250_HOME	1058
5250_INSERT	1059
5250_FORWTAB	105A
5250_BACKTAB	105B
5250_END	105C
5250_ERASEEOF	105D
5250_FIELDMARK	105E
5250_CURSORSEL	105F
5250_VTABUP	1060
5250_VTABDN	1061
5250_AID_CLEAR	2030
5250_AID_ENTER	2031
5250_AID_HELP	2032
5250_AID_ROL_DN	2033
5250_AID_ROL_UP	2034
5250_AID_ROL_LEF	2035
5250_AID_ROL_RIG	2036
5250_AID_PRINT	2037
5250_AID_PA1	2038
5250_AID_PA2	2039
5250_AID_PA3	203A
Key_F1	2001
Key_F2	2002
Key_F3	2003
Key_F4	2004
Key_F5	2005
Key_F6	2006
Key_F7	2007
Key_F8	2008
Key_F9	2009
Key_F10	200A
Key_F11	200B
Key_F12	200C
Key_F13	200D
Key_F14	200E
Key_F15	200F

Key_F16	2010
Key_F17	2011
Key_F18	2012
Key_F19	2013
Key_F20	2014
Key_F21	2015
Key_F22	2016
Key_F23	2017
Key_F24	2018
5250_ATTN	2040
5250_HELP	2041
5250_SYSREQ	2042
5250_TESTREQ	2043