

## Notes:

- Default PIN code: 12345

## Configuration:

1. Perform Clean boot.
2. Perform a Cold Boot by removing and re-installing the battery onto the RS507. The RS507 starts to operate using SSI mode.


### Clean Boot:

Clean Boot restores the RS507 to its factory default configuration.

To perform a clean boot:

1. Remove the battery from the RS507.
2. Press and hold the Restore key.
3. Install the Battery onto the RS507.
4. Keep holding the Restore key pressed for about five seconds until a chirp is heard and the Scan LEDs flash green.

## Security

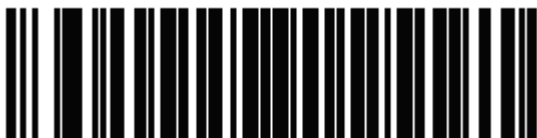

**Low Bluetooth Security**

## Unpairing barcode

Use unpairing barcode to unpair the scanner and the device.



Unpairing barcode