

Configuration:

1. Perform Clean boot.
2. Perform a Cold Boot by removing and re-installing the battery onto the RS6000. The RS6000 starts to operate using SSI mode.


Clean Boot:

Clean Boot restores the RS6000 to its factory default configuration.

To perform a clean boot:

1. Remove the battery.
2. Press and hold the Restore key.
3. Install the Battery into the RS6000.
4. Continue to press and hold the Restore Key for about five seconds until a chirp is heard and the Scan LEDs flash green. The RS6000 is now in its factory default configuration.

Security

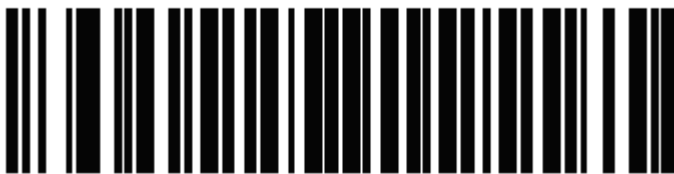

***Low Bluetooth Security.**

Unpairing barcode

Use unpairing barcode to unpair the scanner and the device.



Unpairing